

PARTS AND SERVICE

For parts and service, contact the nearest Distributor.
When ordering parts, please specify:

MODEL NUMBER

PART NUMBER

PART DESCRIPTION

Repairs to transmitter and receiver should be performed by a
qualified repairperson. See Radio Control Instructions.



the original since 1921

OVERHEAD DOOR CORPORATION

ADVANCE/OPERATOR DIVISION

801 ST. JOE STREET


SHELBYVILLE, INDIANA 46176

1-800-275-6187

9203231030



the original since 1921

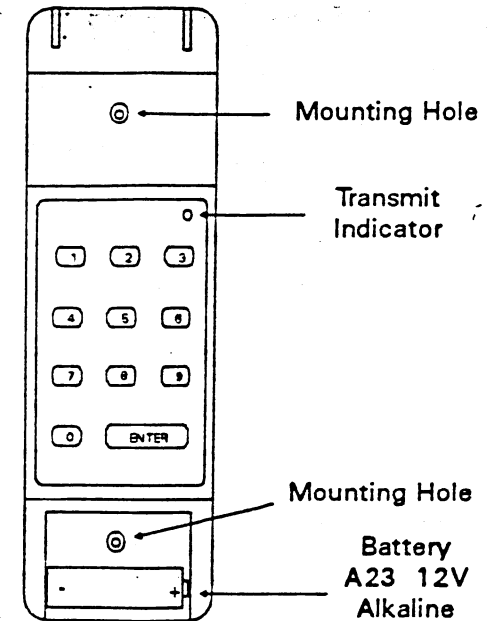

DIGITAL ACCESS CONTROL

The Digital Access Control (DAC) provides a secure and convenient method of controlling your Overhead Door garage door openers that have the ONE BUTTON security code program feature. Any of 10,000 different 4 digit security codes may be chosen. It is battery operated and does not require any wires for installation.

P/N 108503-0001

2/25/92

PROGRAMMING

This step is easier done prior to installation and near the opener. You have only 20 seconds from the time the opener program button is actuated to send the security code.

Choose a 4 digit security code. Put the opener into the program mode as outlined in the opener Owners Manual. Press the "ENTER" BUTTON followed by the selected sequence of four numbers and then the "ENTER" button. The opener will respond as described in the owner's manual.

INSTALLATION


Two screws are provided for mounting as illustrated on cover. To access the lower hole, press and slide the battery compartment cover downward.

OPERATION


Press the "ENTER" button, enter your 4 secret digits and press the "ENTER" button again. (For additional safety, the "ENTER" button acts like the wall pushbutton during the travel of the door approximately 15 seconds.) This allows you to quickly stop the door if necessary. Check your other transmitters to be sure that their codes operate the opener. If not, follow the instructions for "Programming Multiple Security Codes" in the garage door opener Owner's Manual.

TO CHANGE BATTERY


Press in and slide the battery compartment downward. Remove old battery. Replace with new battery. Make sure the positive (+) terminal is aligned with the (+) on the case. Replace the battery cover. The unit is now ready for use.




Some of the following precautions and warnings are identified with this warning symbol. This symbol indicates some of the conditions which can result in serious injury or death.



Keep transmitters and remote controls out of the reach of children. Do not let children play with or use the transmitters or remote controls.



Do not stand or walk under a moving door! Do not let children play "Beat the Door". It is very dangerous and can result in serious injury or death. Adults should set a good example.



The DAC should be out of the reach of children (at least 5 feet from the floor or ground) and away from all moving parts. Mount and use the DAC button where you can clearly see the closing garage door.

This device complies with FCC rules Part 15. Operation of this device is subject to the following two conditions.

1. This device may not cause harmful interference.
2. This device must accept any interference, that may be received, including interference that may cause undesired operation.